 


## Congratulations on purchasing an EDISION proton T265 LED

Please note that this information is valid at the time of publication.

Current information and detailed user manuals can be found on the Internet at: [www.edision.gr](http://www.edision.gr)

### 1 Unpacking

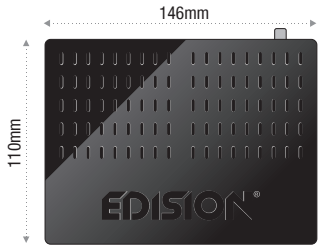

Remote control with 2 AAA batteries



Documentation



Service note

Please contact your EDISION specialist dealer for any further support and service.

 
#### Receiver proton T265 LED

**Notes:** The front is factory fitted with a protective foil which can be removed easily and with caution. (Protective foil only for devices with display)

The scope of delivery may also include parts not listed here


#### Front Panel

- ① Infrared sensor for the reception of remote control commands
- ② Display LED, displays current information

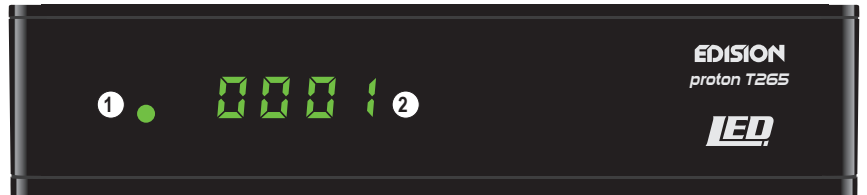


#### Back Panel

 - ③ RF IN: Input for connecting the signal from the antenna
- ④ S/PDIF: Audio interface for amplifier/audio console
- ⑤ HDMI: Connection to an HDTV quality TV
- ⑥ SCART: For connecting to a TV set, using SCART cable [not for HD TV]
- ⑦ Connection for an adapter (DC 5V / 1,5A)

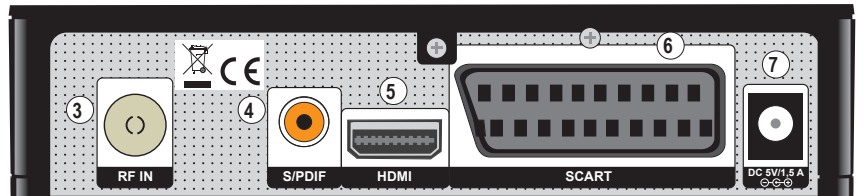

#### Subpage

 
- ⑧ USB: Connection for USB storage devices

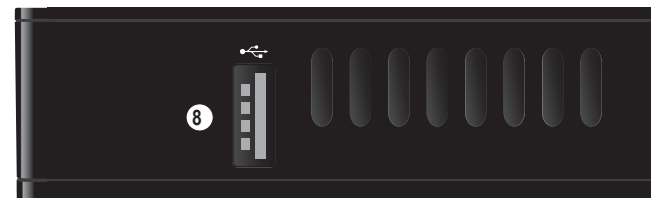

### 2 Connecting and switching on

**Note:** For trouble-free signal reception your antenna and cable installation should be calibrated and inspected by a qualified professional with a digital TV-level-measuring instrument.

 
- Connect the receiver's **HDMI-output** to the HDMI-input of your television set (TV), for HDTV quality.
- Then connect the coaxial cable from the terrestrial antenna to the **RF IN** input of the receiver.
- Insert the batteries into the remote. Further information you will find at the back of this instruction manual.
- Connect the receiver to the mains power supply network, by means of its power supply unit included in the package.
- The receiver starts with the BOOT-process and will be ready for you to enjoy in a few minutes.

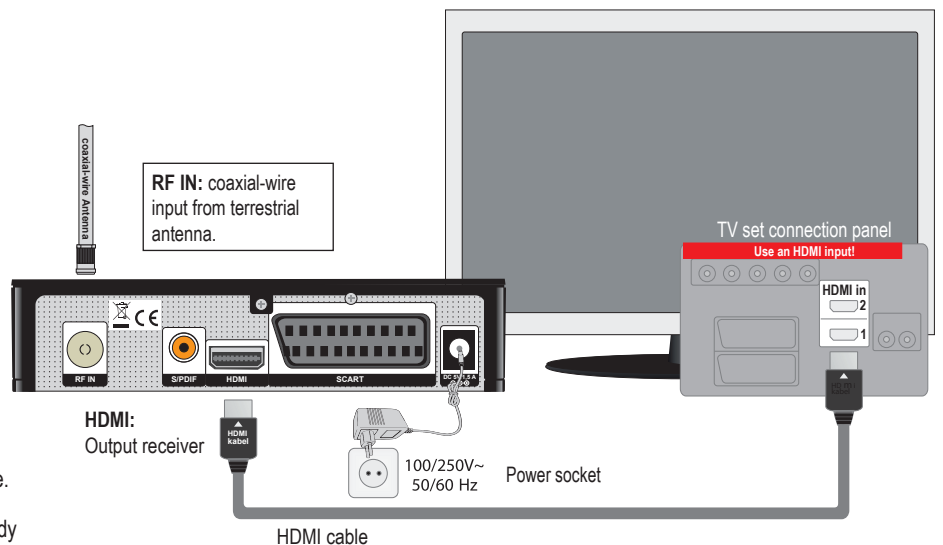


### 3 Remote control

**Notes:** Many of the listed buttons have multiple functions, which, are displayed in the menus. Some buttons and functions are optional. Important functions and buttons are briefly explained below. The buttons to be used are marked in red in the diagrams.


You are watching a channel, but now want to switch to another channel  
» **How to switch between channels ....**



**Option 1**  
Use the up-down arrow buttons while watching television to select another channel.




**Option 2**  
Enter, via the number buttons, the number of the channel that you want displayed. Enter the number 0 via the ZOOM button.




**Option 3**  
Call up the channel list via the OK button. Use the arrow buttons to navigate to the channel you want to select. Press the OK button to select the channel.

You are watching a TV program or listening to a radio program and now want to change the volume  
» **How to change the volume on the receiver ....**



 
**Option 1**  
In TV or Radio mode, press the right arrow key to increase the volume. Press the left arrow key to decrease the volume.

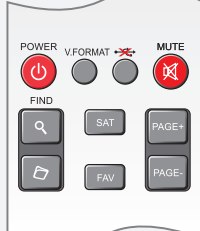


**Option 2**  
Press the MUTE button in TV or Radio mode to switch off the sound completely. Repeated pressing of the MUTE button switches the sound back on.

» **How to use the main menu ....**


The channel list displays all the installed channels  
» **How to use the channel list ....**



 
Press the MENU button to call up the main menu. Use the arrow buttons to navigate between the menu items and the OK button for selecting. Press the EXIT button to exit the menu structure.

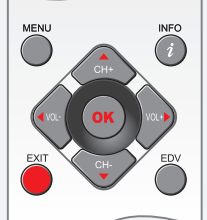

 
Press the OK button in TV or Radio mode to call up the channel list. Use the arrow buttons and OK button to navigate the menu. The EXIT button closes the list.





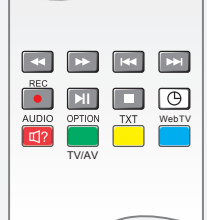


























Use the Page button in the right column of the menu to scroll page by page through the channel lists. The INFO button displays information about a channel. The FIND button searches for channels.



Depending on which column of the menu of the channel list you are, you can call up other functions and menus with the coloured buttons. These possible functions are displayed in the lower section.



-  On/Off button.
-  Mute On/Off.
-  Changes the screen TV standard.
-  Safe USB Removal
-  Displays the satellite lists.
-  Displays the favourite lists.
-  To search for programs in lists.
-  Displays a file list.
-  Scrolls up (+) or down (-) in lists of channel lists.
- 
-  Displays the main menu.
-  Displays the information bar.
-  Use the arrow buttons to scroll up in lists. Below, scroll left or right or change the volume. Confirm the menu inputs with the OK button or call up the channel list.
-  Exits a Menu/Dialogue window
-  Selection of the electronic program guide EDIVISION.
-  Selection of TV/Radio program. Input of numbers or letters in the menus.
-  Returns to the previous program.
-  Toggles between TV and Radio mode.
-  Allows fast backward.
-  Allows fast forward.
-  Skips to the beginning or previous Recording/Image.
-  Skips to the beginning or previous Recording/Image.
-  Starts recording manually.
-  Starts Playback/Pauses playback.
-  Finishes TimeShift, a recording or a playback. Allows you to set the time at which the Receiver autom. switches to standby mode.
-  Calls up the Audio menu.
-  Option button. Switching between TV/AV mode (Not in HDMI mode).
-  Calls up the Subtitle/Teletext menu.
-  Web TV button (not supported).

**Insert/replace batteries in(to) the remote control**

When inserting the batteries (2XAAA), observe the correct polarity. When the remote control is not in use for a long period of time, please remove the batteries to avoid possible damage to the remote control. If the batteries are dead, dispose of them properly and in an environmentally friendly manner, and not with household waste.

